




100 SOUTH CAMPUS DRIVE RESIDENT GUIDE – UNIT LAUNDRY OPERATION

Each unit is equipped with an LG WM1455HWA front-load washer and LG DLHC1455W electric dryer. Below is a set of instructions on how to operate the appliances.


WASHER

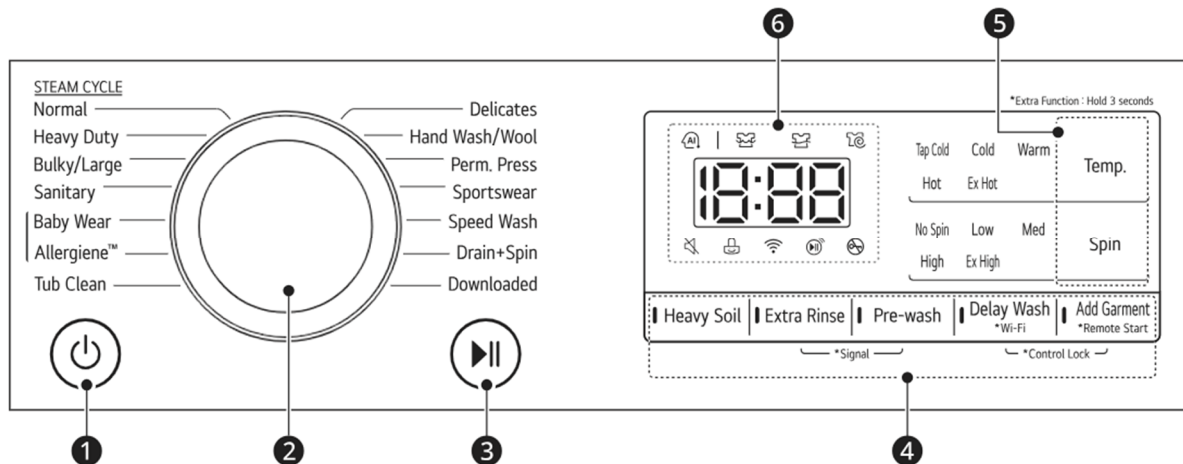

1. Press the power button to turn the appliance on. Pressing this button during the cycle will cancel that cycle and any settings will be lost.
 2. Turn the knob to select the desired cycle. Once the desired cycle has been selected, the standard presets will appear on the display. These settings can be adjusted using the Cycle Modifier buttons at any time before starting the cycle.
 3. Press the start/pause button to start the selected cycle. If the appliance is running, use this button to pause the cycle without losing the current settings.
 4. Use the extra function buttons to select additional cycle options.
 5. Use the cycle modifier buttons to adjust the wash temperature, spin speed and soil level settings for the selected cycle.
 6. The display shows the settings, estimated time remaining, options, and status messages for the appliance.
-



DRYER

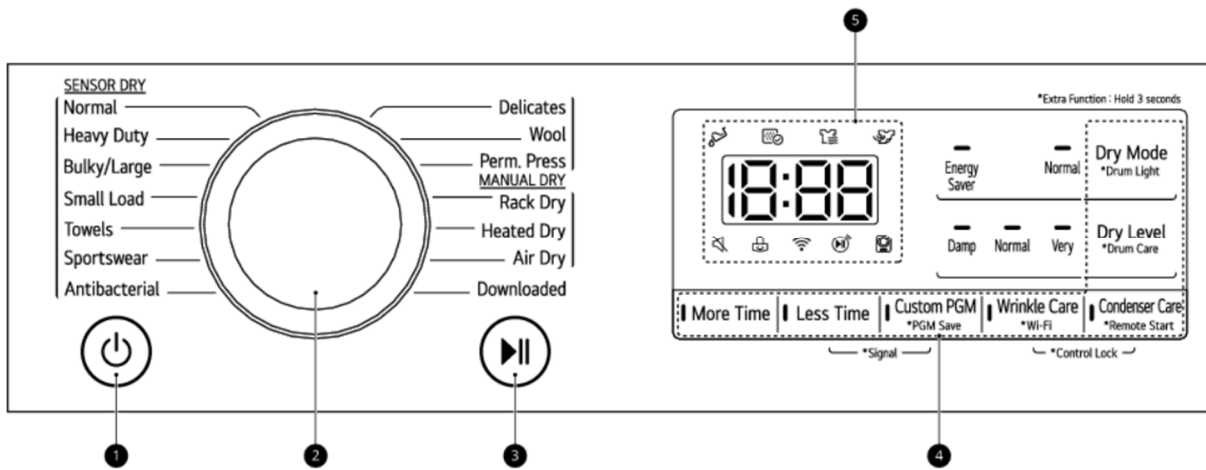

1. Press the power button to turn the appliance on. Press again to turn the appliance off.
 2. Turn the Knob to select the desired cycle. Once the desired cycle has been selected, the standard presets will be shown on the display. On Manual Dry Cycles, these settings can be adjusted using the cycle modifier buttons anytime before starting the cycle.
 3. Press the start/pause button to start the selected cycle. If the appliance is running, use this button to pause the cycle without losing the current settings.
 4. Use the cycle modifier buttons to select the desired options for the selected cycle.
 5. The display shows the settings, estimated time remaining, options, and status messages for the appliance.
-